ULTRASONIC **HUMIDIFIER**

QUICK START GUIDE

WHAT'S INCLUDED

Humidifier

- PARTS LIST
- Mist Nozzle 2. Handle
- 3. Tank Cover
- 4. Power Cord
- 5. Control Panel 6. Aroma Container

LED DISPLAY







(D)













based on room humidity)

Auto Mode (humidity maintained at 55-68%)

Humidistat (adjust manually from 40-80%)



Timer Mode (set the time between 1 - 10 hours)







Out of Water

% = Humidity

°C = Temperature

H = Timer

HOW TO USE

BEFORE USING, please make sure that all parts are clean and assembled correctly on the unit

Pull the water tank out of the unit. HOW TO USE THE TIME FUNCTION unscrew the cap and fill with water. It Press the TIME button on the LED display

is recommended that you use water

less than 40 degrees Celsius (100

Replace the cap tightly and place

Plug in the unit and press the ON/OFF

HOW TO USE THE AROMA FUNCTION

aroma oil to the sponge in

Remove the ground container from the

unit and add a drop of water-soluble

Replace the aroma container back in

If you do not want to use the aroma

it completely before returning it to

function, remove the sponge and wash

dearees Fahrenheit).

the tank in the unit.

switch to turn it on.

the container.

the unit.

the unit

- panel to choose the number of hours
- You can choose between 1 and 10 hours
- . The unit will turn off after the timer has run out.

HOW TO USE THE AUTO MODE FUNCTION

Press the AUTO button on the LED

- display panel. The machine will maintain a relative humidity level of 55-68%.
- The machine will adjust the mist level
- based on the room humidity. · Touch the AUTO MODE button again to

stop the machine.

display panel.

HOW TO USE THE NIGHT FUNCTION Press the NIGHT MODE button on the LED

based on the room humidity. that you would like the unit to run.

- stop the machine.

HOW TO MANUALLY SET THE HUMIDITY LEVEL

. The machine will dim and only the

NIGHT MODE button will be visible.

· The machine will adjust the mist level

Touch the NIGHT MODE button again to

Press the HUMIDISTAT button on the LED display panel to choose the

desired humidity. You can choose between 40 and 80% RH by pressing the HUMIDISTAT button until

level quicker if you so choose.

- the level is displayed. The machine will stop working once the
- humidity level is reached.
- Please note the mist level button has 3 settings that control the output of mist which will help you reach your humidity

CARE INSTRUCTIONS
NOTE: Before cleaning, make sure the unit

unit frequently.

Rinse with warm water.

Rinse the water tank with warm water

Wipe away scale and sediment with a

For a deeper clean, you may run the

machine with vinegar or a gentle

Wipe down the unit with a soft dry cloth

twice a week when using the

soft dry cloth or a soft brush.

detergent mixed with water.

Do not use harsh detergents.

Dry the tank completely.

as needed.

is unplugged.

TROUBLESHOOTING

when running.

PROBLEM	POSSIBLE REASON	SOLUTION
There is no steam.	There is no power.	Make sure the unit is plugged into a working 110V outlet Make sure the ON/OFF switch is activated
	There is no water ir not enough water in the water tank.	Add more water to the water tank.
The unit is emitting a strong smell	The machine is new.	Take the cap off of the water tank and let it air

SOLUTION	
Make sure the unit is plugged into a working 110V outlet Make sure the ON/OFF switch is activated	
Add more water to the water tank.	The unit is noisy.
Take the cap off of the water tank and let it air out in a cool and dry place for 12 hours.	

The water in the tank is old. Refill with fresh The

e water tank is inserted incorrectly.	Remove the water tank and reinsert it into the unit correctly.
No water or not enough water in the water tank	Add more water to the water tank.
ne unit is not level.	Place unit on a firm and level horizontal surface.

Empty the

water in the tank and

clean it

thoroughly.

water.

WARNINGS

- This humidifier should only be used for its intended use.
- It is recommended that this unit only be used when the air temperature is between 5 to 40 degrees Celsius (40 to
- 100 degrees Fahrenheit) and the humidity is less than 80% RH.
- Make sure the unit is plugged into a arounded and safe 110/120V outlet. Use this unit on a flat and firm.
- Do not use the unit in a wet environment such as a bathroom.

horizontal surface.

is runnina.

before movina it.

- · Do not immerse the unit in water.
- Do not touch the plug or cord with wet hands.

Do not clean the unit while it is running.

· Remove the water tank from the unit

- Do not reach into the unit while it

of children. • Do not attempt to disassemble or repair the unit SPECIFICATIONS

heat source.

damage them.

- Power Range: 25 volts
- Water Tank Capacity: 4.5L
- Rated voltage: 100-240 volts

Do not run the unit near a heater or

· Do not run the unit near furniture or

electronics as the steam may

Keep this unit out of the reach

- Maximum moisture capacity: >35OML/H
- Rated frequency: 50/60Hz Use time for a full water tank: 15 hours

